

FIG. 1
(PRIOR ART)

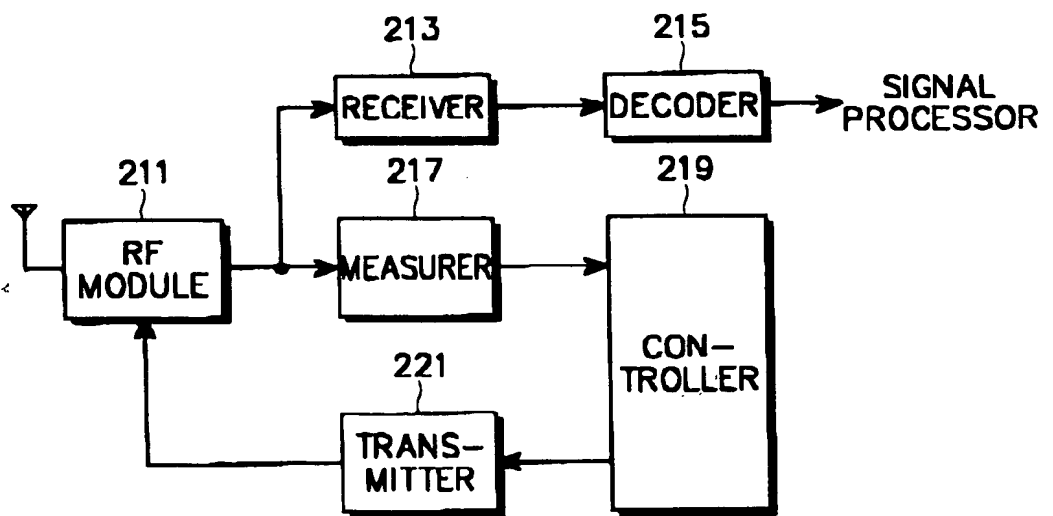


FIG. 2

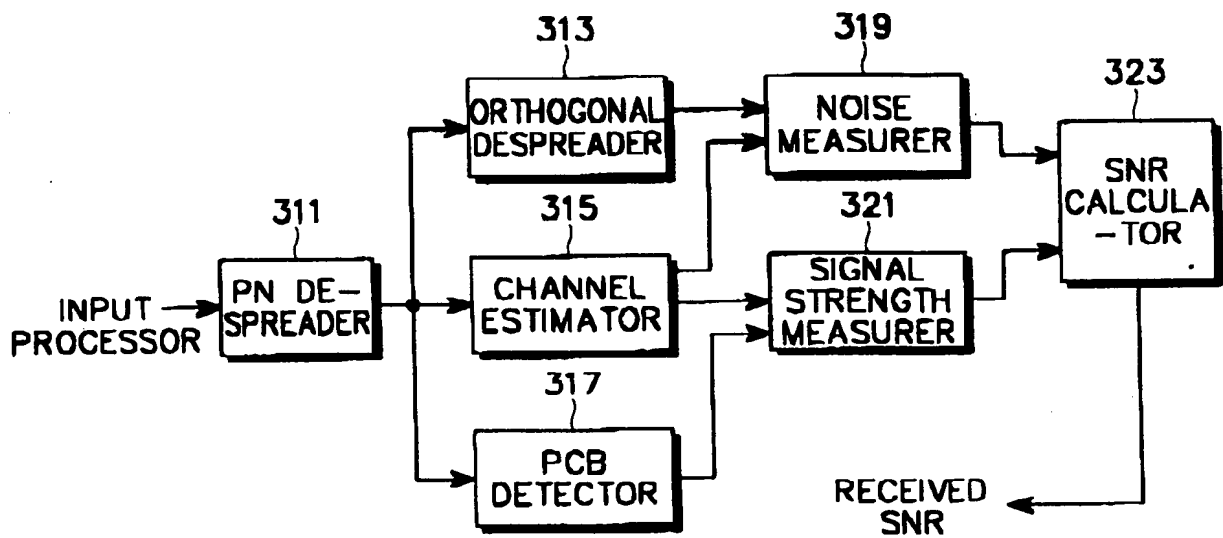


FIG. 3

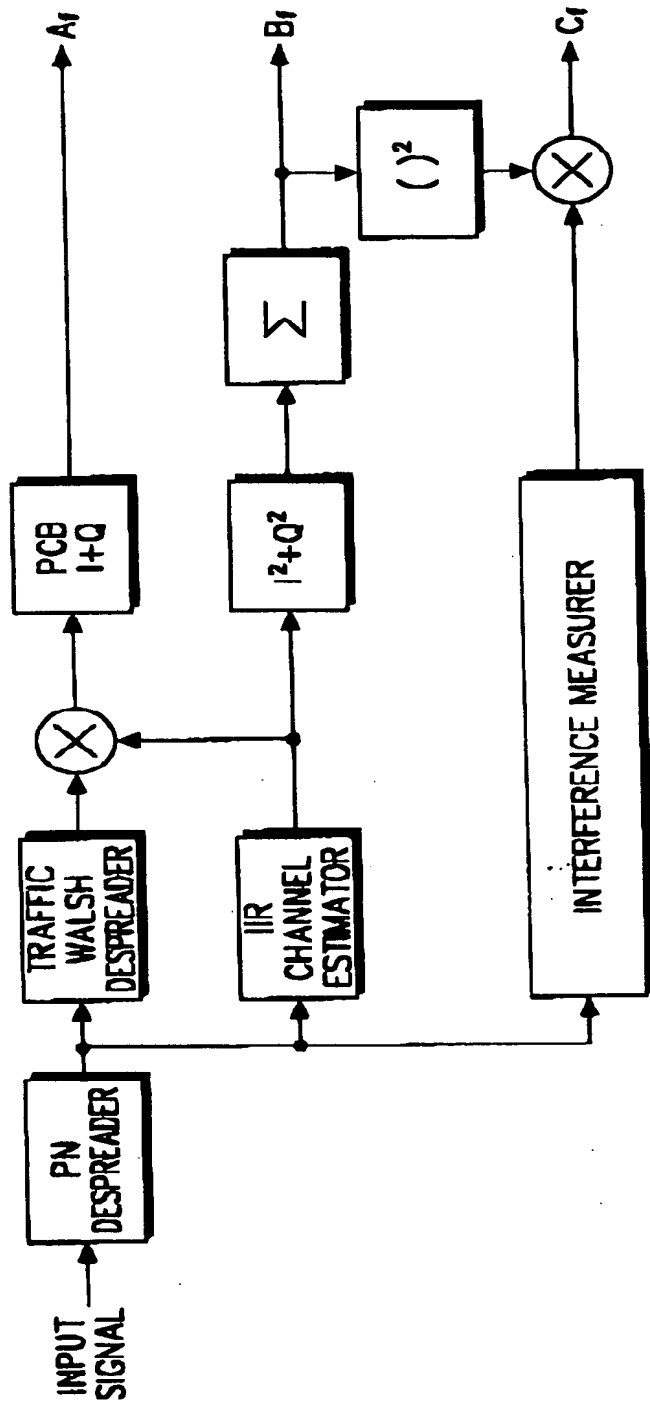


FIG. 4

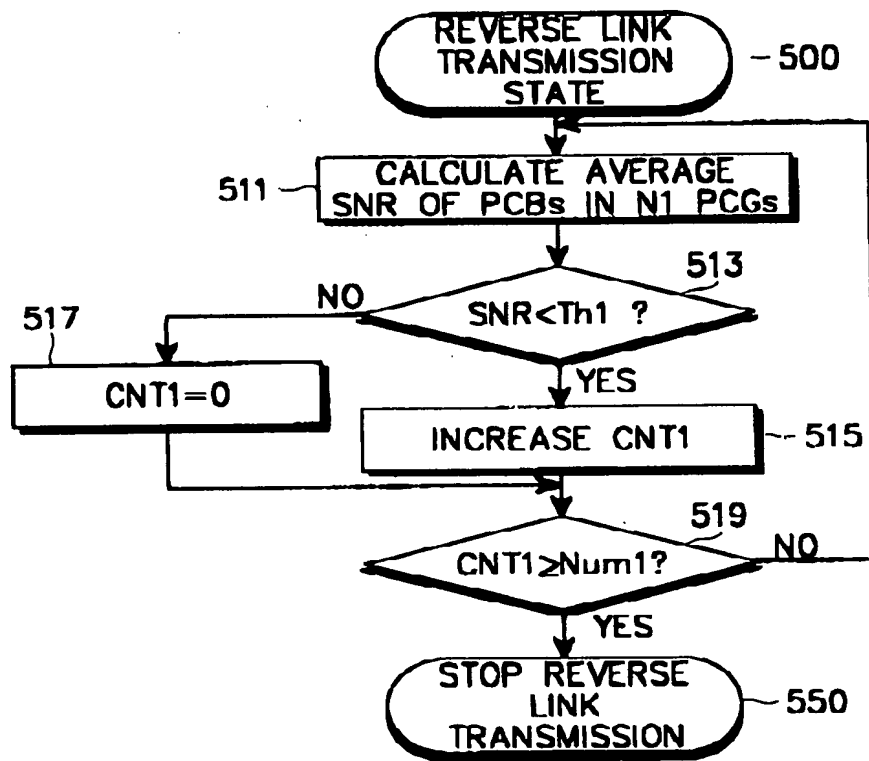


FIG. 5

```

graph TD
    600([REVERSE LINK STOP STATE]) --> 611[611 CALCULATE AVERAGE SNR OF PCBs IN N2 PCGs]
    611 --> 613{613 SNR > Th2 ?}
    613 -- NO --> 617[617 CNT2=0]
    613 -- YES --> 615[615 INCREASE CNT2]
    617 --> 619{619 CNT2 ≥ Num2?}
    615 --> 619
    619 -- YES --> 650([RESUME REVERSE LINK TRANSMISSION])
    619 -- NO --> 600
  
```

FIG. 6

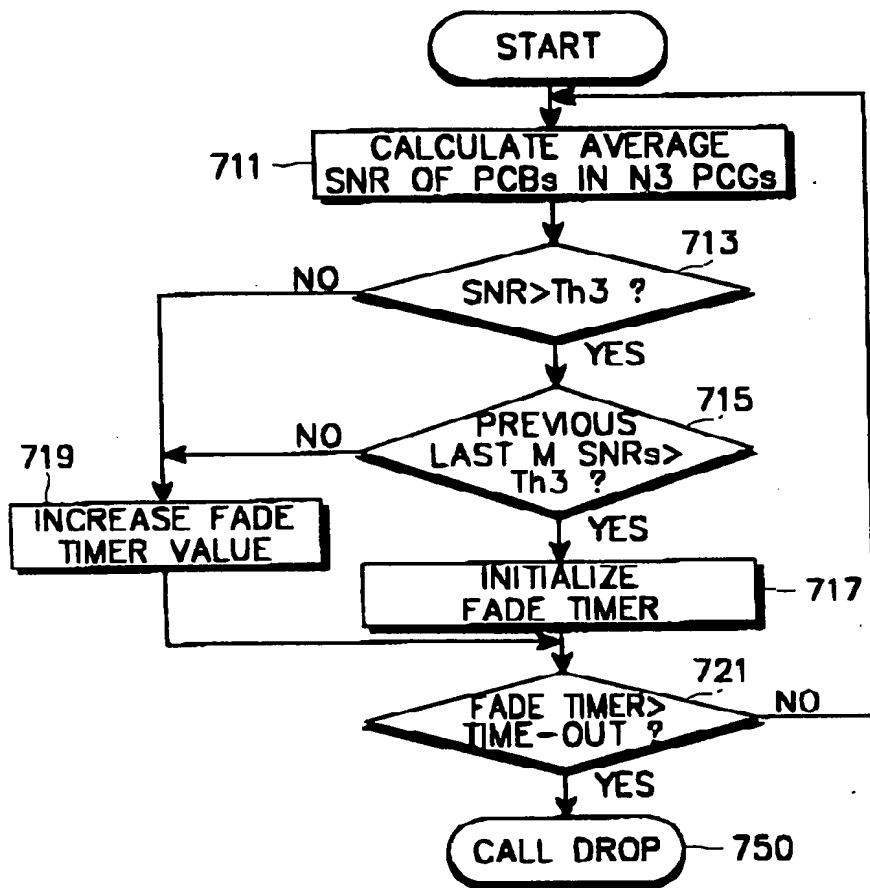


FIG. 7

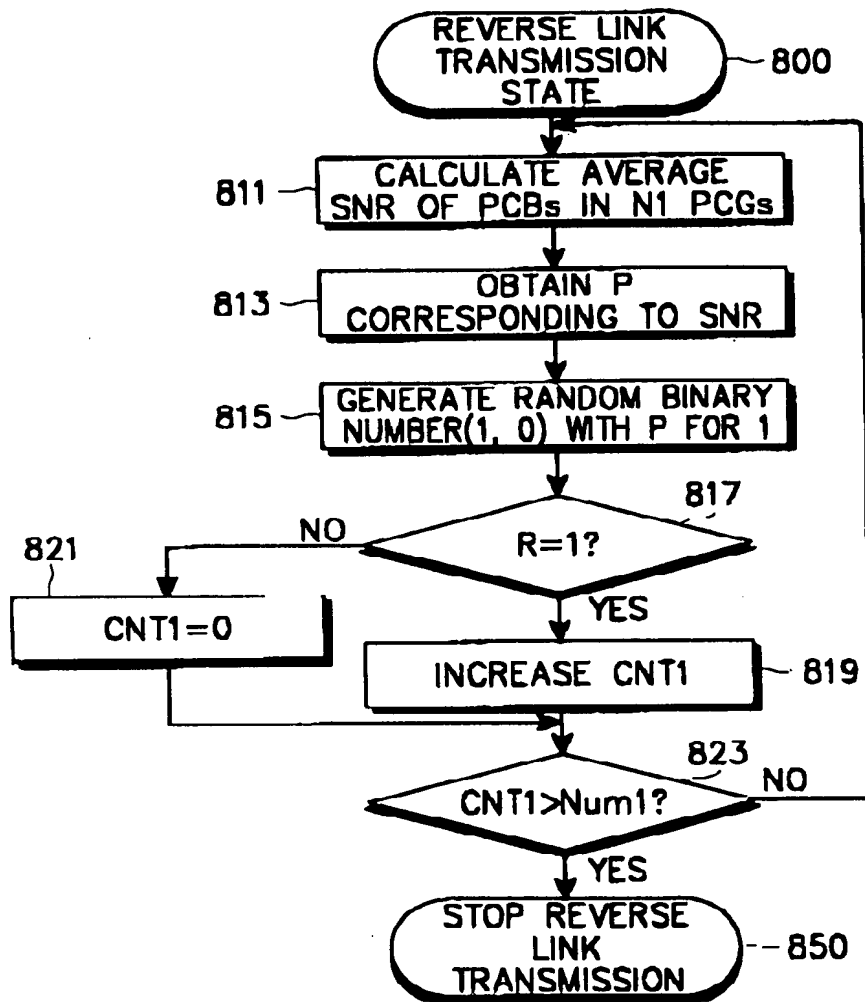
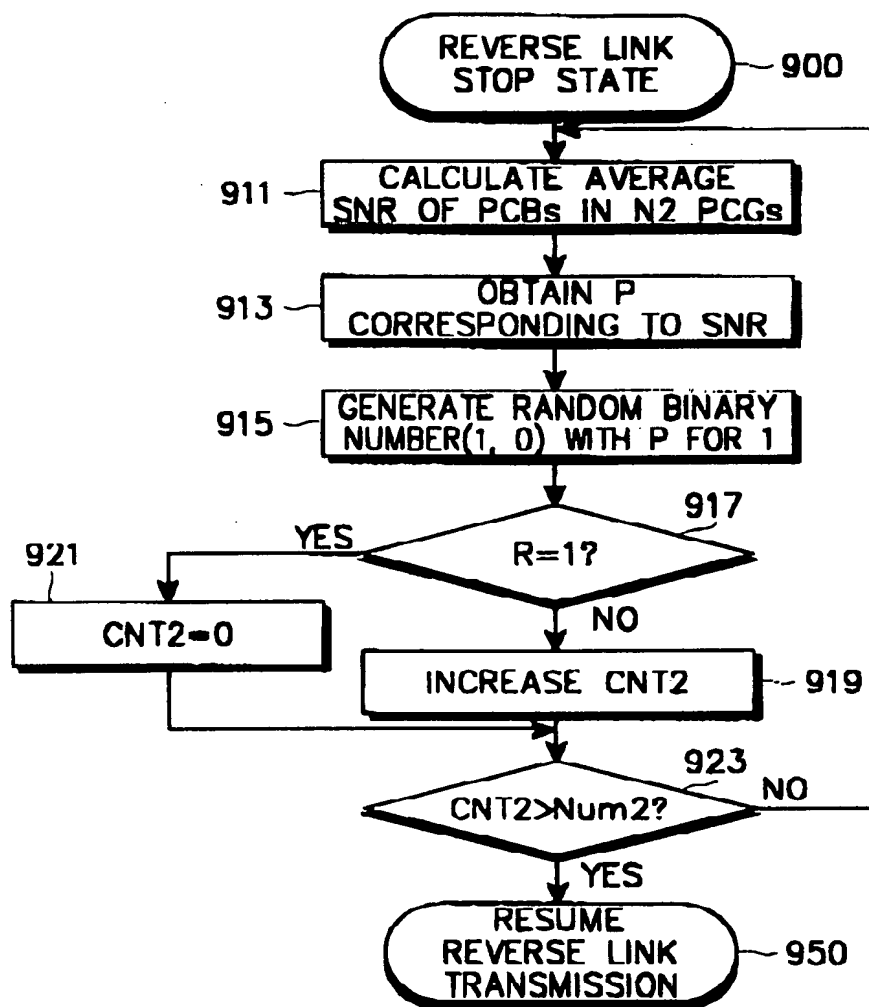


FIG. 8

1



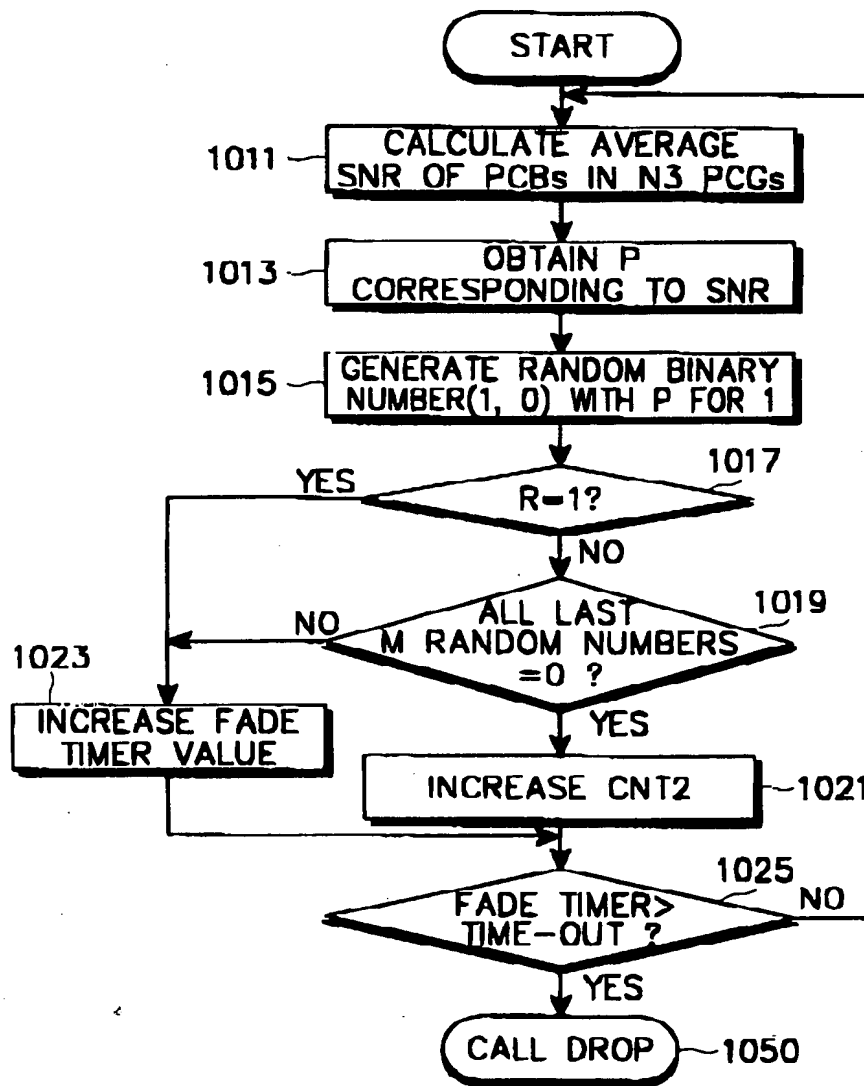


FIG. 10